

# Taylor C707: Stage 1 Cleaning Process

## 1 Drain Product



Words in **GREEN** signifies "ON"  
Words in **RED** signifies "OFF"

- **Standby Mode** ❄️ wait 4-5 hours
- **Standby Mode** ❄️
- Remove feed tube
- **Wash Mode** 🧼
- Drain product
- Refrigerate or discard

## 2 Clean Hopper



- **Wash Mode** 🧼
- Clean top hopper, lid & feed tube
- Brush mix inlet hole
- Fill freezer barrel with wand
- **Wash Mode** 🧼 wait 2-3 minutes

## 3 Drain Pre-wash & Remove Draw Valve



- Drain pre-wash
- **Wash Mode** 🧼
- Remove draw valve & prime plug
- Spray each opening
- Clean & re-install prime plug

## 4 Install Bypass System



- Spray off bypass tube
- Insert into mix inlet hole
- Terminate bypass hose to a suitable drain
- Replace hopper lid

## 5 Install Pro-control Module



- Clean bottom of freezer door
- Wet all O-rings
- Install Pro-control
- Engage keeper switch
- Connect water supply

## 6 Install LEXX™ Cups



- Install 1 LEXX™ cup into each cup housing

## 7 Start the Pro-control



- **"ONE TOUCH"** to initialize the Pro-control cycle
- Audible beeps from Pro-control
- **Wash Mode** 🧼
- Clean any removed components

## 8 Pro-control Cycle Complete



- "GREEN LED" blinks, cycle is done
- Press & release **"PLAY/PAUSE"**
- **Wash Mode** 🧼
- Disconnect water supply
- Remove left cup housing over bucket
- Raise prime plug/remove bypass to drain
- **Wash Mode** 🧼 momentarily
- Re-attach cup housing
- Disengage keeper switch & remove the Pro-control

## 9 Sanitize Freezer Door & Re-install Draw Valve



- Clean prime plug, freezer door & all openings
- Disconnect bypass system
- Re-install draw valve & prime plug
- Leave feed tube out
- Perform self-clean on Pro-control

## 10 Prime Machine



- Place a bucket under the freezer door & open prime plug
- Pour mix into hopper & hold draw valve open
- When only fresh mix is flowing, close draw valve
- When steady stream of mix flows from prime plug opening, close prime plug
- Re-install feed tube
- Replace hopper lid
- **Auto Mode** ❄️

## HYDRA RINSE

Words in **GREEN** signifies "ON"  
Words in **RED** signifies "OFF"


- = OFF
- ⏻ = ON
- 🧼 = MIX LOW
- 🧼 = MIX OUT
- ❄️ = MIX REF
- ❄️ = STANDBY
- 🧼 = WASH
- ❄️ = AUTO



- "Reset-Cups-Program"**
  - Reset
  - Register Cleaning Cycles
  - Read # of Cleanings Available
- "ONE TOUCH"**
  - Initialize Cleaning Cycles
  - Self-Clean Mode when used simultaneously w/ "PLAY/PAUSE"
- "Status Indicators" LEDs**
  - Power On/Cycle Initiated
  - Cycle Paused
  - Errors
  - # of Registered Cleanings
- "PLAY/PAUSE"**
  - Cancel/Conclude Cleaning
  - Pause/Resume Cleaning
  - Self-Clean Mode when used simultaneously w/ "ONE TOUCH"

\*Refer to the Manual for Full Instructions\*

## Registration of Token Tag

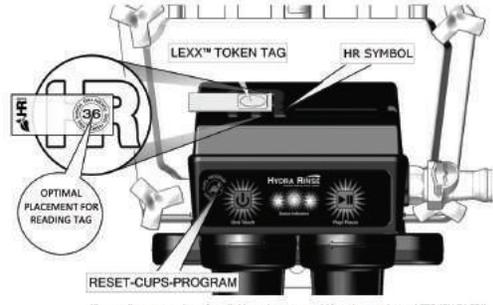

- To register, hold the "TOKEN TAG" on the "HR Symbol"
- Keep "TOKEN TAG" in position, press and release the "RESET-CUPS-PROGRAM" button
- LED's will illuminate
- Once registered, a "Beep" will be heard & the "Status Indicators" blinking the number of stored cycles
- To finish, remove the "TOKEN TAG" from the registration zone, press and then release the "RESET-CUPS-PROGRAM" button
- The Pro-control is ready to use