


# Taylor 161 Series: Stage 1 Cleaning Process

## 1 Drain Product

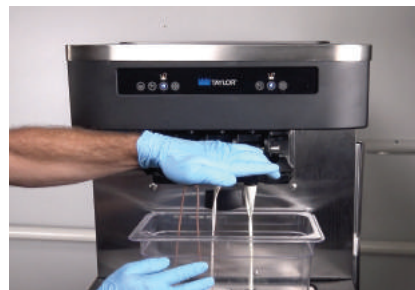

Words in **GREEN** signifies "ON"  
Words in **RED** signifies "OFF"

- **Standby Mode** wait 4-5 hours
- **Mix Refrigeration**
- **Standby Mode**
- Remove feed tubes
- **Wash Mode**
- Drain product
- Refrigerate or discard

## 2 Clean Hoppers



- **Wash Mode**
- Clean top hoppers, lid & feed tubes
- Brush mix inlet holes
- Fill freezer barrels with wand
- **Wash Mode**
- wait 2-3 minutes

## 3 Drain Pre-wash & Remove Draw Valves



- Drain pre-wash
- **Wash Mode**
- Remove draw valves
- Spray each opening

## 4 Install Bypass System




- Spray off bypass tubes
- Insert into mix inlet holes
- Terminate bypass hose to a suitable drain
- Replace hopper lid

## 5 Install Pro-control



- Clean bottom of freezer door
- Wet all O-rings
- Install Pro-control
- Re-install center draw valve handle and pin
- Connect water supply & check that water is turned on

## 6 Install LEXX™ Cups

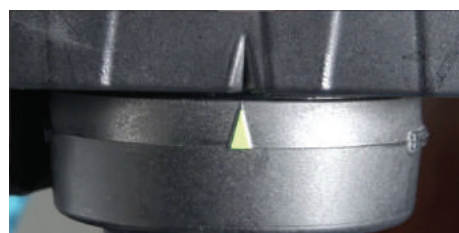


- Install 1 LEXX™ cup into each cup housing

## 7 Start the Pro-control




- **"ONE TOUCH"** to initialize the Pro-control cycle
- Audible beeps from Pro-control
- **Wash Mode**
- Clean any removed components

## 8 Pro-control Cycle Complete

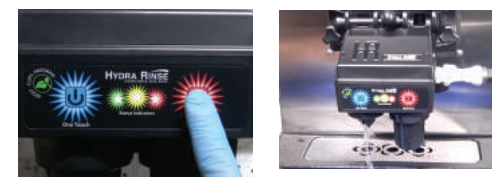

- "GREEN LED" blinks, cycle is done
- Press & release **"PLAY/PAUSE"**
- **Wash Mode**
- Disconnect water supply
- Remove left cup housing over bucket
- Remove bypass to drain
- **Wash Mode**
- momentarily
- Re-attach cup housing
- Remove draw valve handle, pin & Pro-control

## 9 Sanitize Freezer Door & Re-install Draw Valves

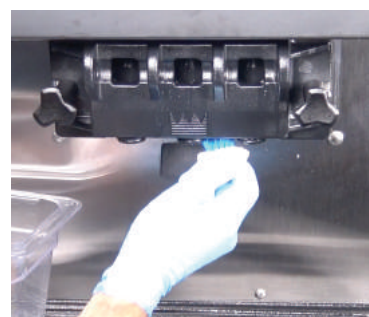


- Clean freezer door & all openings
- Leave apart or re-install & re-fill the machine within 72 hours
- Perform self-clean on Pro-control

## 10 Prime the Machine



- Place a bucket under the door
- Pour mix into hoppers & hold draw valves open
- When only fresh mix is flowing, close draw valves
- When mix stops bubbling in hopper
- Re-install feed tubes
- Replace hopper lid
- **Auto Mode**

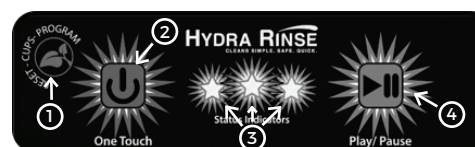

### 1. "Reset-Cups-Program"

- Reset
- Register Cleaning Cycles
- Read # of Cleanings Available

### 2. "ONE TOUCH"

- Initialize Cleaning Cycles
- Self-Clean Mode when used simultaneously w/ "PLAY/PAUSE"

### 3. "Status Indicators" LEDs

- Power On/Cycle Initiated
- Cycle Paused
- Errors
- # of Registered Cleanings

### 4. "PLAY/PAUSE"

- Cancel/Conclude Cleaning
- Pause/Resume Cleaning
- Self-Clean Mode when used simultaneously w/ "ONE TOUCH"

**HYDRA RINSE**  
CLEANS. SIMPLE. SAFE. QUICK.

Words in **GREEN** signifies "ON"  
Words in **RED** signifies "OFF"



= AUTO



= ON



= OFF



= MIX REF



= WASH



= PUMP



= STANDBY



= MIX LOW



= MIX OUT

\*Refer to the Manual for Full Instructions\*