

Gravity Series: Stage 1 Cleaning Process

Words in **GREEN** signifies "ON"
Words in **RED** signifies "OFF"

1 Drain Product




- **Standby Mode** ❄️ wait 4-5 hours
- **Standby Mode** ❄️
- Remove feed tube(s)
- **Wash Mode** 🚿
- Drain product
- Refrigerate or discard

2 Clean Hopper(s)



- **Wash Mode** 🚿
- Clean top hopper(s), lid(s) & feed tube(s)
- Brush mix inlet hole(s)
- Fill freezer barrel(s) with wand
- **Wash Mode** 🚿 wait 2-3 minutes

3 Drain Pre-wash & Remove Draw Valve(s)

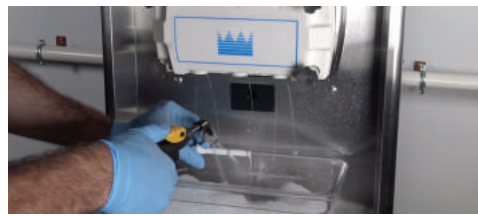

- Drain pre-wash
- **Wash Mode** 🚿
- Remove draw valve(s) & prime plug(s)
- Spray each opening
- Clean & re-install prime plug(s)

4 Install Bypass System



- Spray off bypass tube(s)
- Insert into mix inlet hole(s)
- Terminate bypass hose to a suitable drain
- Replace hopper lid(s)

5 Install Pro-control Module



- Clean bottom of freezer door
- Wet all O-rings
- Install Pro-control
- Engage keeper switch
- Connect water supply

6 Install LEXX™ Cups




- Install 1 LEXX™ cup into each cup housing

7 Start the Pro-control



- **"ONE TOUCH"** to initialize the Pro-control cycle
- Audible beeps from Pro-control
- **Wash Mode** 🚿
- Clean any removed components
- **If performing Stage 2, flip to back**

8 Pro-control Cycle Complete

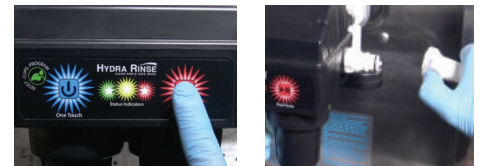

- "GREEN LED" blinks, cycle is done
- Press & release **"PLAY/PAUSE"**
- **Wash Mode** 🚿
- Disconnect water supply
- Remove left cup housing over bucket
- Raise prime plug(s)/remove bypass to drain
- **Wash Mode** 🚿 momentarily
- Re-attach cup housing
- Disengage keeper switch & remove the Pro-control

9 Sanitize Freezer Door & Re-install Draw Valve(s)




- Clean prime plug(s), freezer door & all openings
- Disconnect bypass system
- Leave apart or re-install & re-fill the machine within 72 hours
- Perform self-clean on Pro-control

Keep track of your cleaning schedule:

Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday

HYDRA RINSE
Words in **GREEN** signifies "ON"
Words in **RED** signifies "OFF"

- ❄️ = AUTO
- ⏸️ = PUMP
- ⏻ = ON
- ❄️❄️ = STANDBY
- ⏻ = OFF
- ⏻ = MIX LOW
- ⏻ = MIX REF
- ⏻ = MIX OUT
- 🚿 = WASH

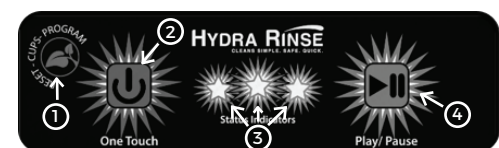

- "Reset-Cups-Program"**
 - Reset
 - Register Cleaning Cycles
 - Read # of Cleanings Available
- "ONE TOUCH"**
 - Initialize Cleaning Cycles
 - Self-Clean Mode when used simultaneously w/ "PLAY/PAUSE"
- "Status Indicators" LEDs**
 - Power On/Cycle Initiated
 - Cycle Paused
 - Errors
 - # of Registered Cleanings
- "PLAY/PAUSE"**
 - Cancel/Conclude Cleaning
 - Pause/Resume Cleaning
 - Self-Clean Mode when used simultaneously w/ "ONE TOUCH"

Refer to the Manual for Full Instructions

Gravity Series: Stage 2 Cleaning Process

Words in **GREEN** signifies "ON"
Words in **RED** signifies "OFF"

1 Pause the Pro-control




- All 3 LED's start blinking about 3 ½ minutes into the cycle
- **"Play/Pause"**

5 Re-lube & Re-assemble Machine



- Re-install rear shaft seal
- Apply lube to smooth part of drive shaft, avoiding hex end
- Re-install remaining components

2 Drain the Machine

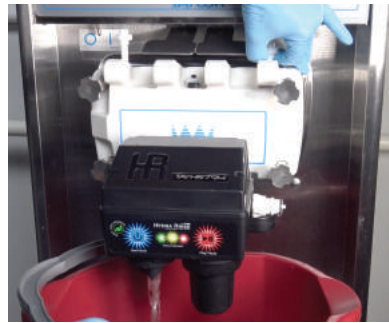

- Disconnect water supply
- Remove left cup housing
- Raise prime plugs or remove bypass tubes to drain

6 Re-install the Pro-control



- Re-install the Pro-Control & connect the water supply
- Re-install prime plugs
- Check that the water is still turned on & the bypass is properly installed

3 Remove the Pro-control




- Re-install the left cup housing
- Remove the Pro-Control & set aside (do not push any additional buttons)
- Pro-Control will beep & green LED will blink while paused

7 Resume Stage 1 Cleaning



- **"PLAY/PAUSE"**
- **Main Power** |
- **Wash Mode** |
- The Pro-Control will now start its sanitizing cycle
- **Revert to Stage 1 Step 8 to complete**

4 Remove & Clean Internal Components

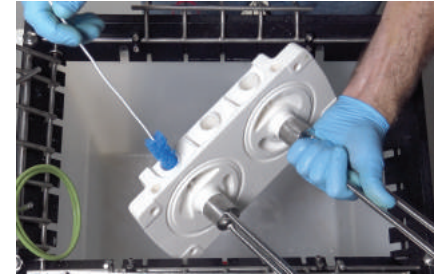

- **Main Power** |
- Remove the freezer door & all internal components
- Clean each cylinder & all components using the wand, wipes and brushes
- Brush clean all door openings