



How to use LEXX® Measure and Pour



CLEANS WITH THE POWER OF CITRIC ACID

Lexx®




When you purchase a LEXX® Measure and Pour Bottle for the Hydra Rinse® Cleaning and Sanitizing System, you'll also receive a 32 Wash Token Card. Make sure to register your 32 washes with the Hydra Rinse Pro-control Module. (instructions on card)



Both the Cleaner and the Sanitizer Cup Housing/Holder must each contain 2 fl. oz. of LEXX® Liquid Sanitizer and Cleaner Concentrate:

- 1.) Place the LEXX® Measure and Pour Bottle on a flat surface.
- 2.) Remove cap and seal from the bottle.
- 3.) Squeeze bottle to begin filling the Measure Cup Chamber.
- 4.) Release pressure from bottle, and allow the LEXX® Concentrate to self level to the top "Fill Line" of the Measure Cup Chamber; be sure to note what size chamber your bottle has; Maximum chamber volume may vary between one and two fluid ounces.
- 5.) Pour content from Measuring Cup Chamber into the Hydra Rinse® Cleaning Cup Holder (2 fl.oz. max)
- 6.) Repeat steps 1-5 for the Hydra Rinse Sanitizing Cup Holder.

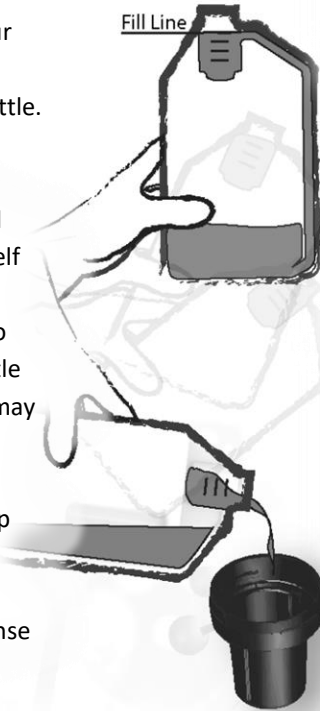

(Hydra Rinse Pro-control Module)



Cleaner Cup Housing/Holder

Sanitizer Cup Housing/Holder

HYDRA RINSE

CLEANS SIMPLE. SAFE. QUICK.